
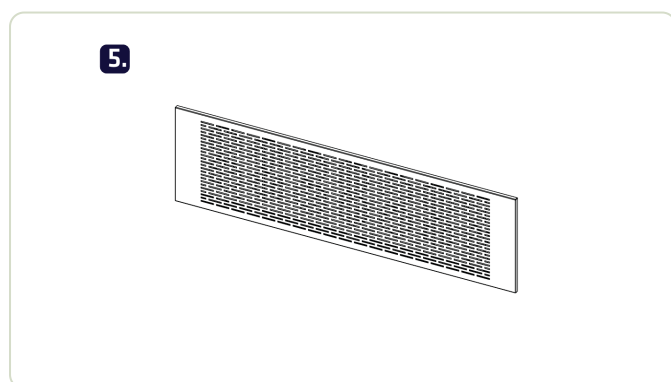
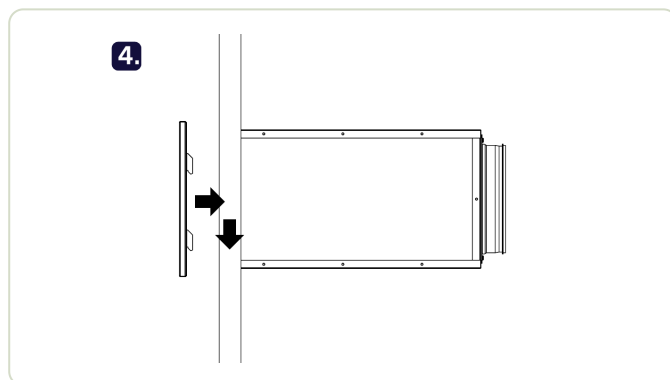
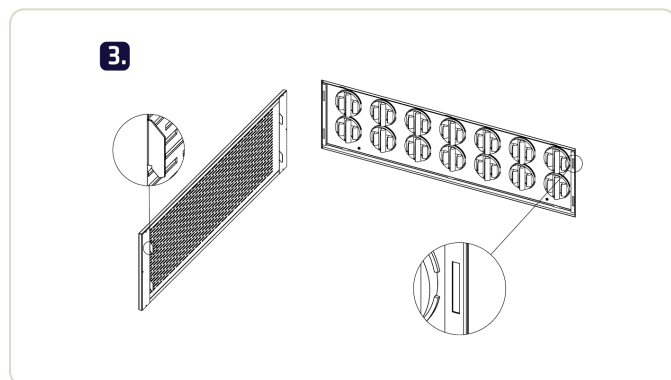
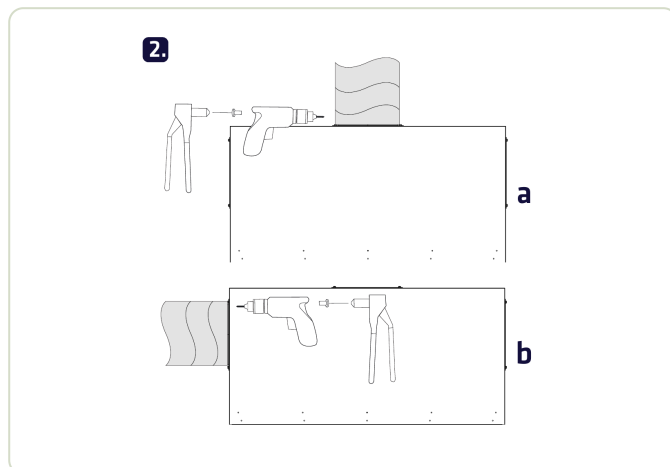


SAGA


Montážní návod

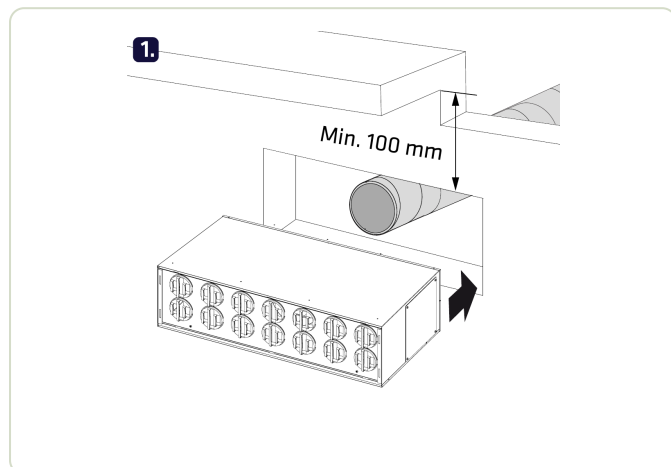


SAGA

Změna způsobu připojení


1.

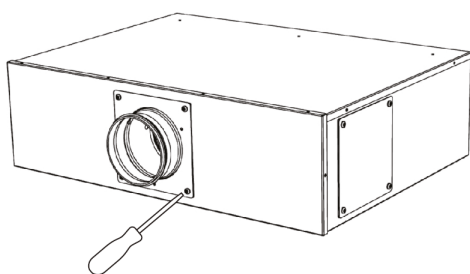


2.

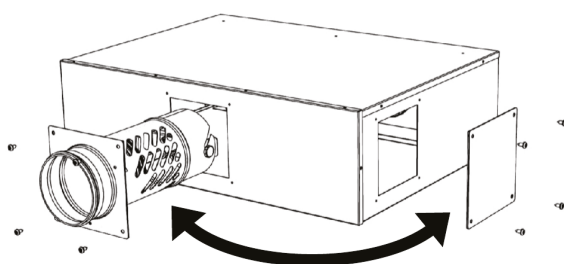

3.

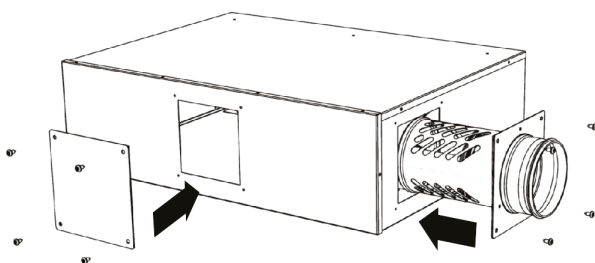


4.

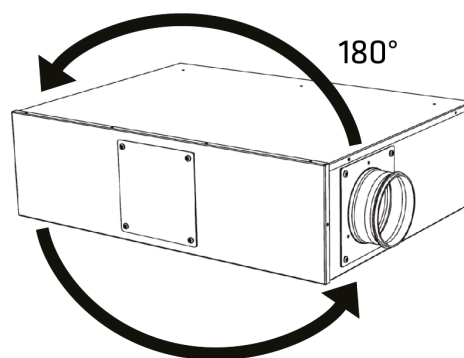


SAGA

Návod k údržbě


1.

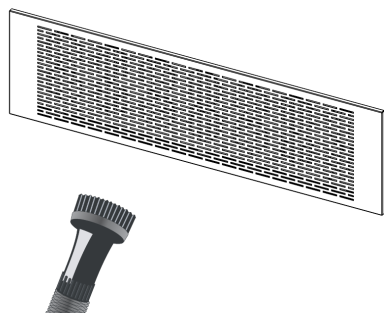


2.

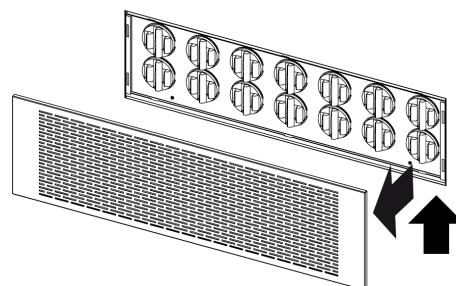


3.

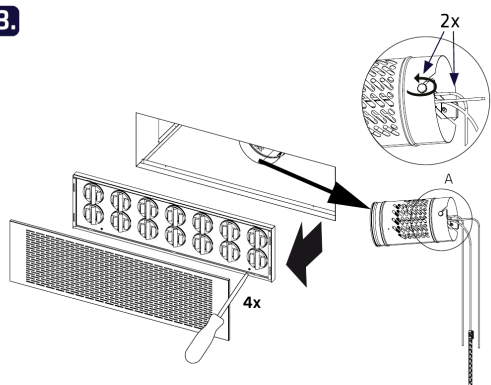

4.




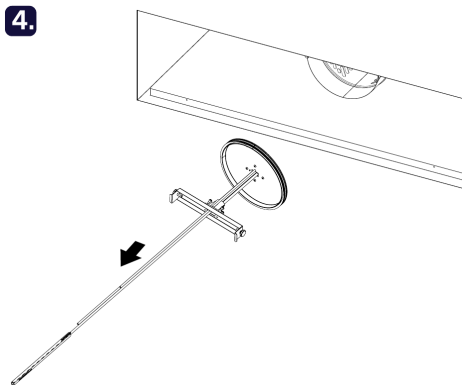


5.

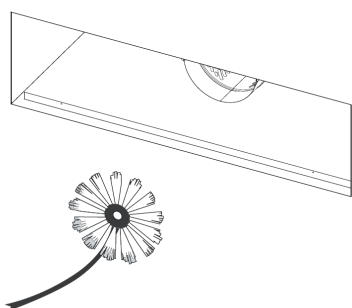

SAGA

Návod k seřízení

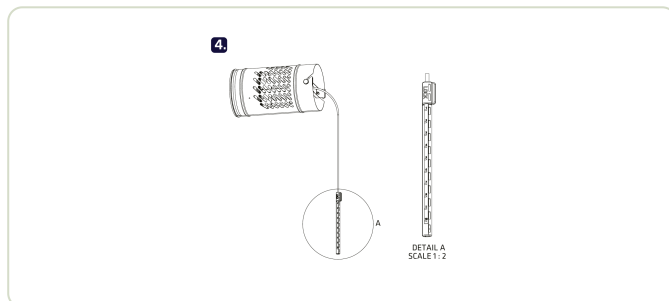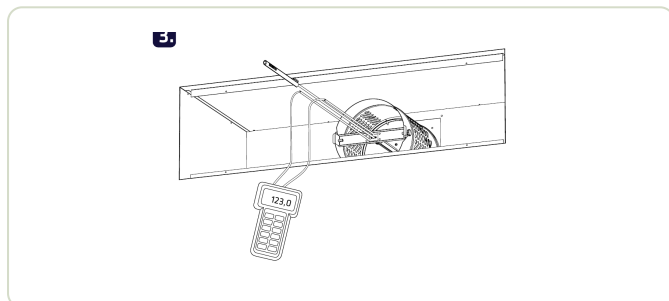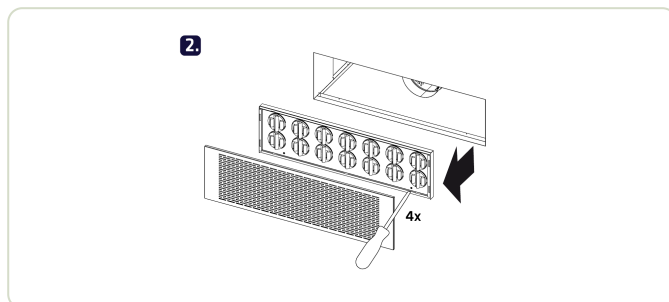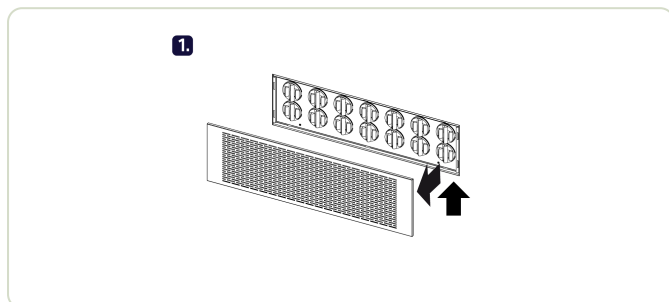

$q_v = k \times \sqrt{\Delta P_m}$	k			
SAGA				
Přívodní vzduch	100	125	160	200
1	6,9	10,7	17,3	24,4
2	5,7	8,5	15,5	22,8
3	4,3	6,2	13,3	20,2
4	2,9	3,9	11,1	16,7
5	1,6	2,2	8,8	13,3
6	0,7	0,9	5,6	9,5
7	–	–	3,2	6,1
8	–	–	1,3	3,2
Odvodní vzduch	100	125	160	200
1	10,8	15,7	21,6	27,3
2	8,8	15,2	20,3	24,7
3	5,5	12,7	18,7	24,0
4	3,9	8,4	15,9	22,8
5	2,3	4,1	12,9	18,3
6	1,0	1,2	9,2	12,6
7	–	–	5,5	7,4
8	–	–	2,5	3,4

Poloha seřízení 1–8