



VIVA-F




Montážní návod

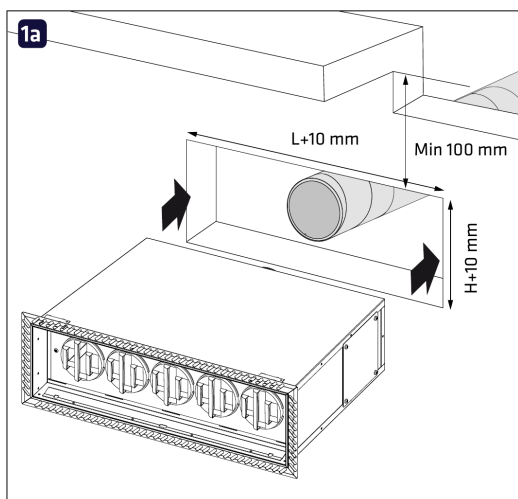

S omítkovým rámem





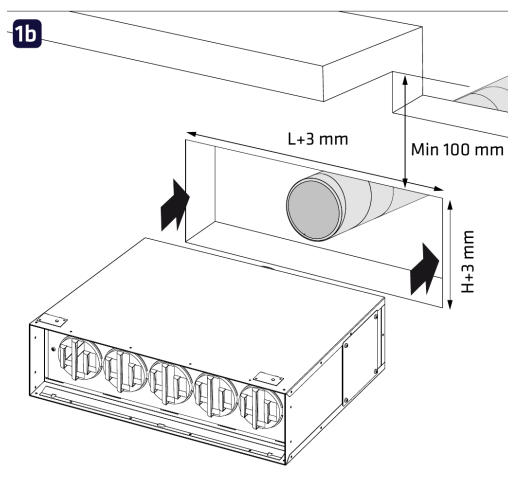


Bez omítkového rámu

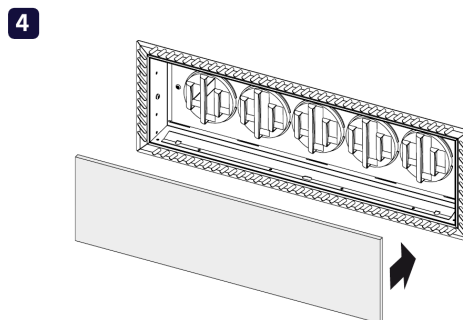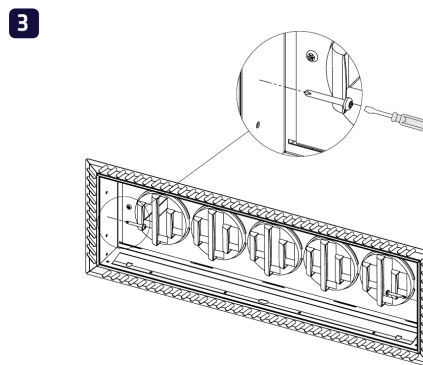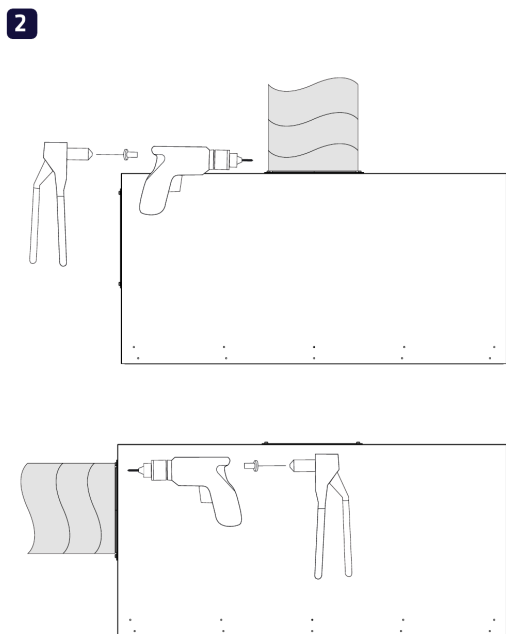

VIVA-F


Změna způsobu připojení

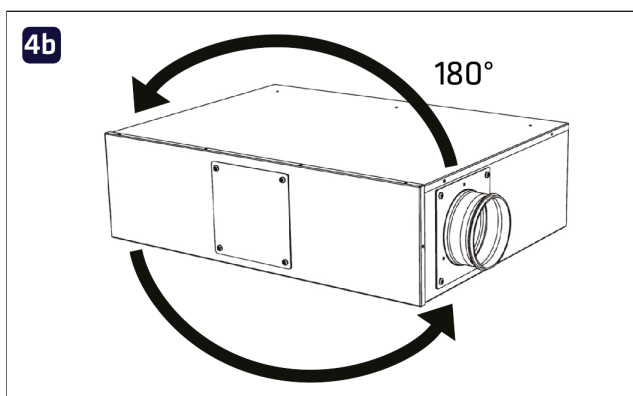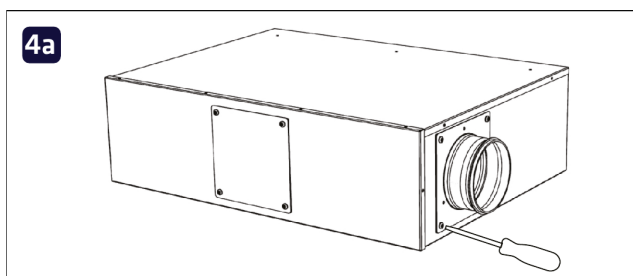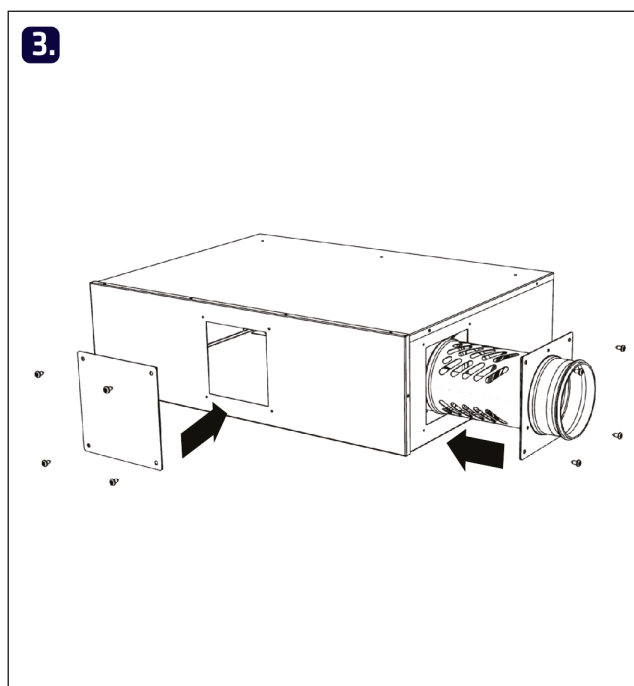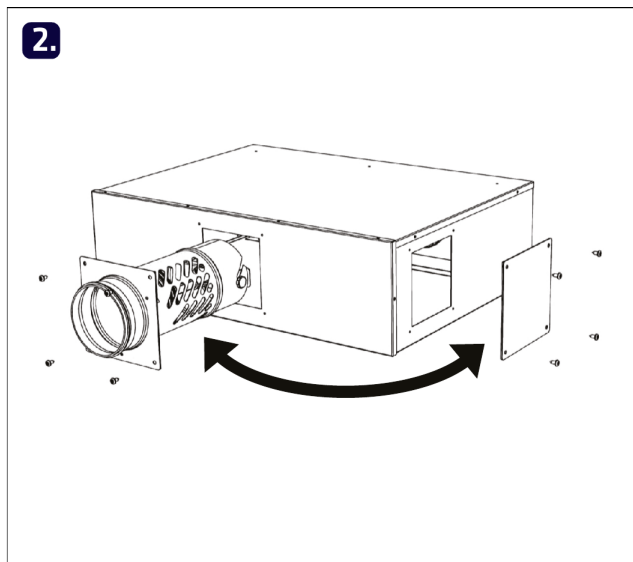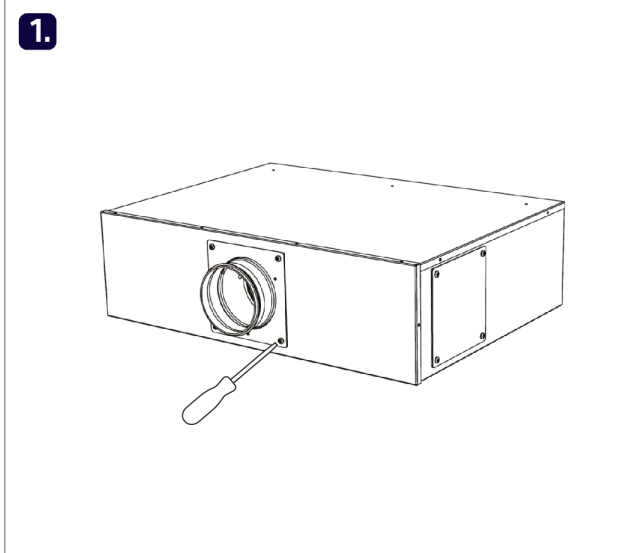


VIVA-F

Montážní návod (pokračování)


5

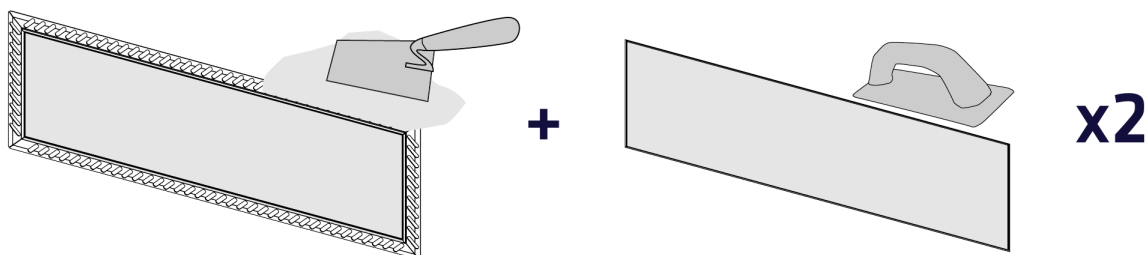


6

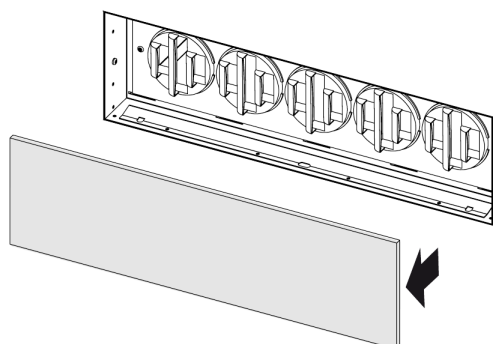


7

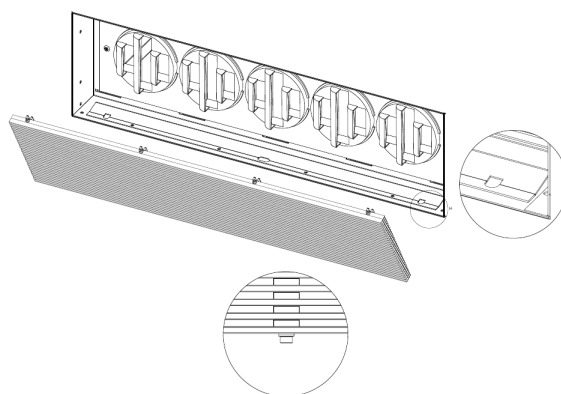

8

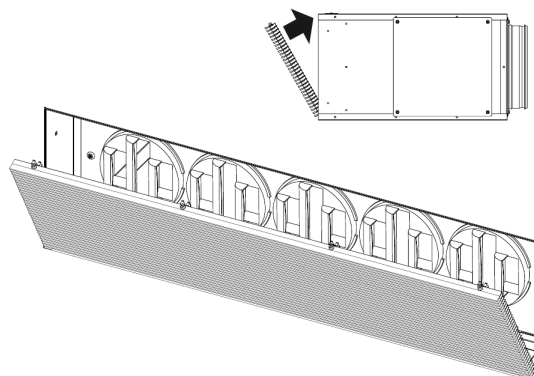


9

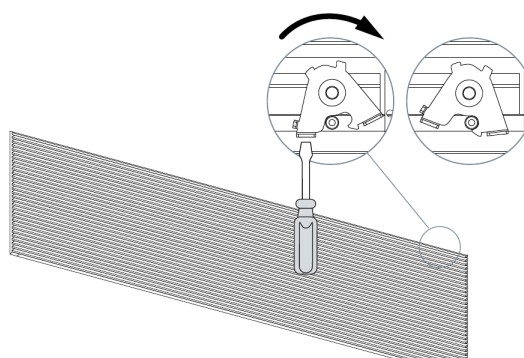



VIVA-F

Návod k údržbě

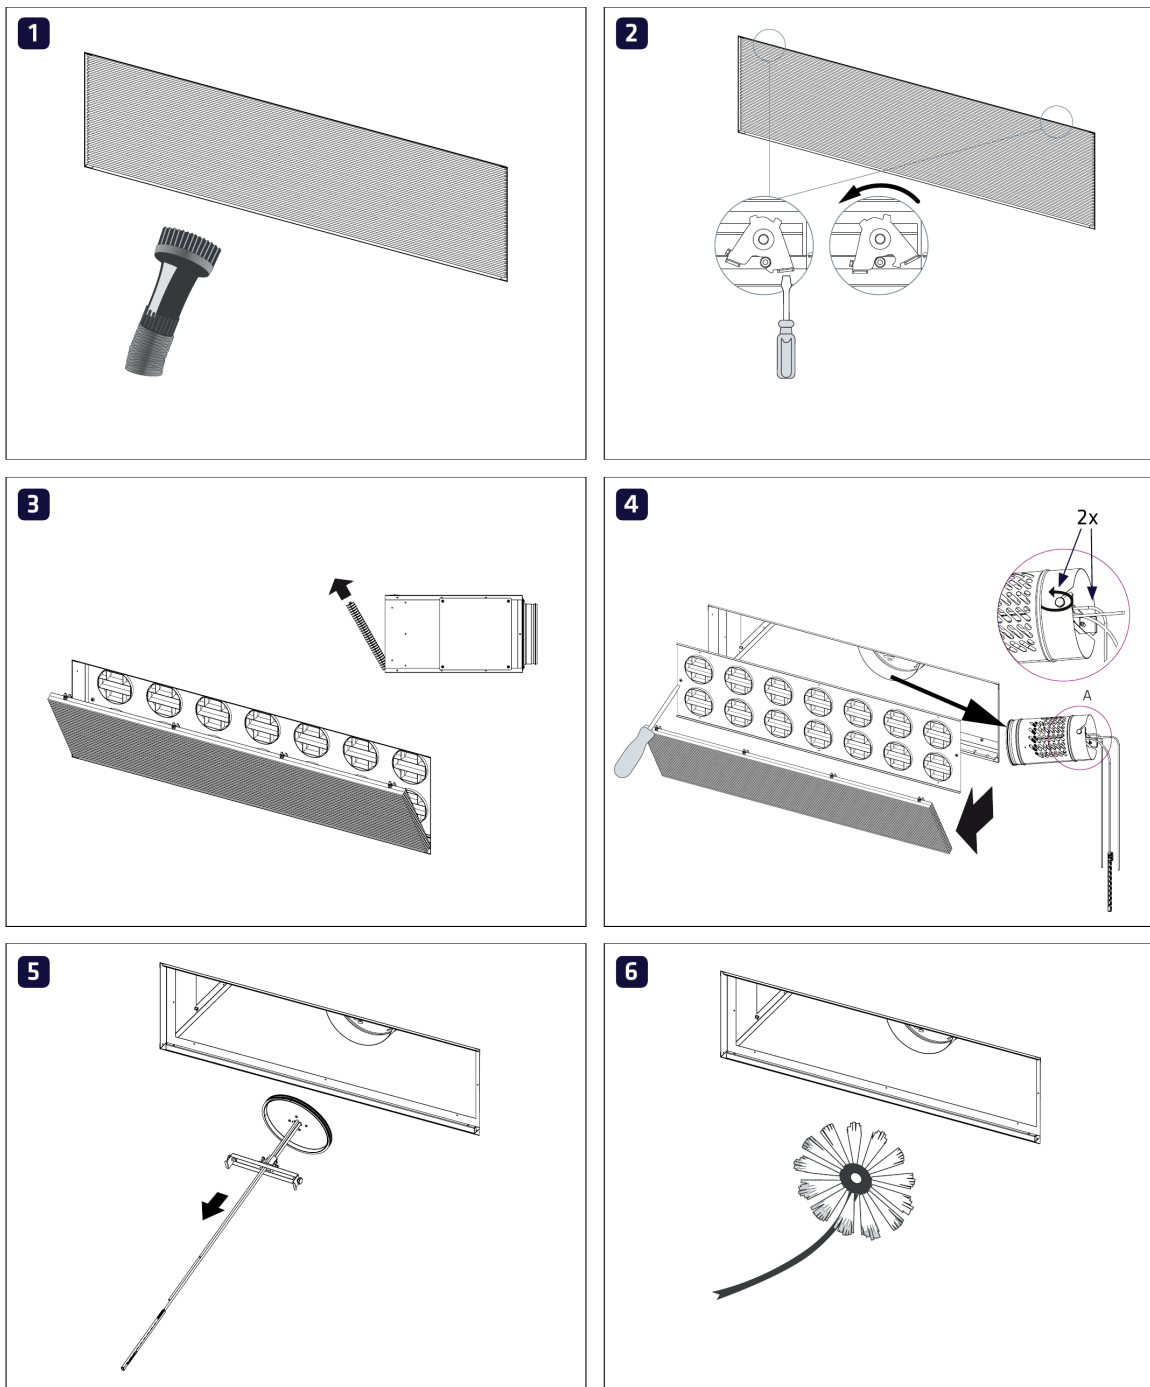

VIVA-F

Návod k seřízení

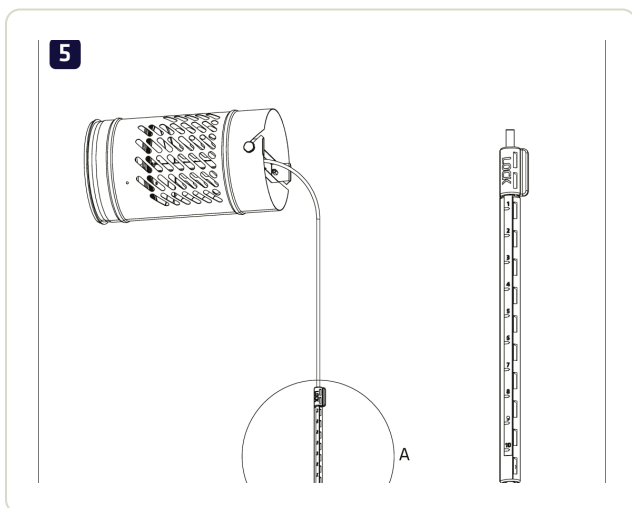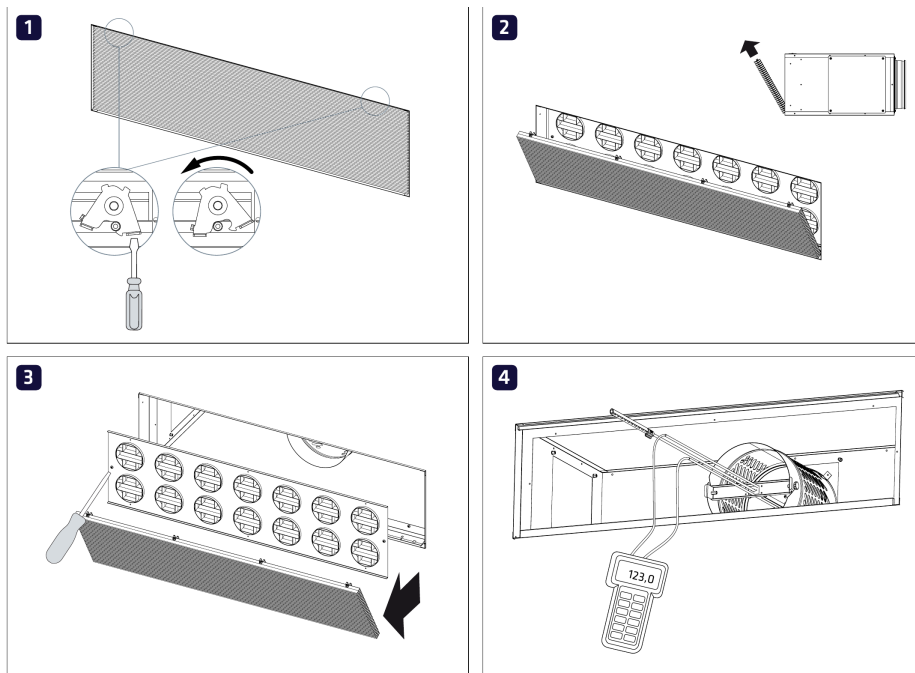

Detail A · měřítko 1:2

$q_v = k \cdot \sqrt{\Delta P_m}$	k — VIVA			
	100	125	160	200
Přívodní vzduch*				
1	6,9	10,7	17,3	24,4
2	5,7	8,5	15,5	22,8
3	4,3	6,2	13,3	20,2
4	2,9	3,9	11,1	16,7
5	1,6	2,2	8,8	13,3
6	0,7	0,9	5,6	9,5
7			3,2	6,1
8			1,3	3,2
Odvodní vzduch*				
1	10,8	15,7	28,8	34,6
2	8,8	15,2	21,5	32,8
3	5,5	12,7	21,2	28,5
4	3,9	8,4	18,4	23,8
5	2,3	4,1	12,9	16,5
6	1,0	1,2	8,7	11,7
7			6,1	7,8
8			2,6	3,6

Poloha seřízení 1–8 · *Rozměr připojení na potrubí (kruhové hrdlo)