
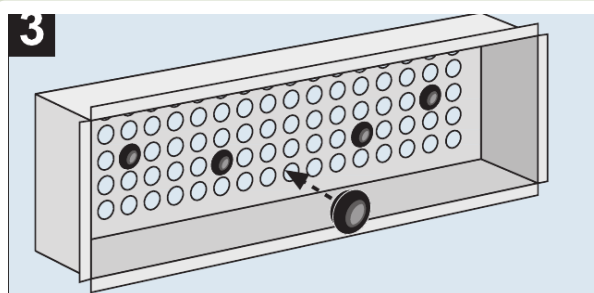
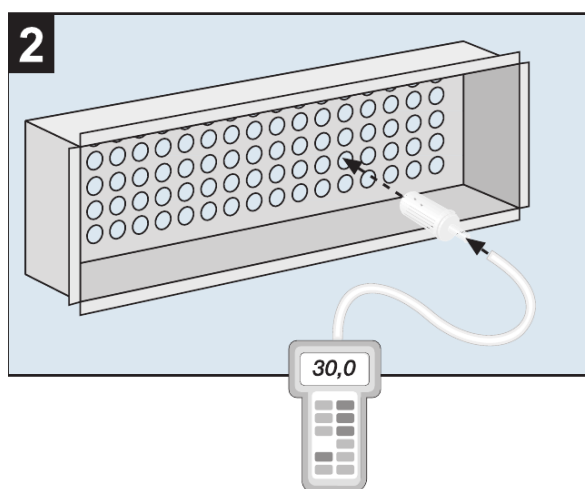


ELO, SAP, SAS

Návod k seřízení

$$q_v = k \cdot \sqrt{\Delta P_m}$$

Velikost	k	
	ELO / SAP Odvodní vzduch	SAS Přívodní vzduch
200 x 100	3,9	4,2
300 x 100	6,1	6,6
400 x 100	8,9	9,6
500 x 100	11,1	12,0
600 x 100	13,9	15,0
800 x 100	18,9	20,4
200 x 150	6,5	7,0
300 x 150	10,2	11,0
400 x 150	14,8	16,0
500 x 150	18,5	20,0
600 x 150	23,1	25,0
800 x 150	31,5	34,0
200 x 200	9,1	9,8
300 x 200	14,2	15,4
400 x 200	20,7	22,4
500 x 200	25,9	28,0
600 x 200	32,4	35,0
800 x 200	44,0	47,6
300 x 300	22,4	24,2
400 x 300	32,6	35,2
500 x 300	40,7	44,0
600 x 300	50,9	55,0
800 x 300	70,5	74,8
400 x 400	47,4	51,2
500 x 400	59,2	64,0
600 x 400	74,0	80,0
800 x 400	102,0	108,8
500 x 500	77,9	84,2
600 x 600	111,0	120,0

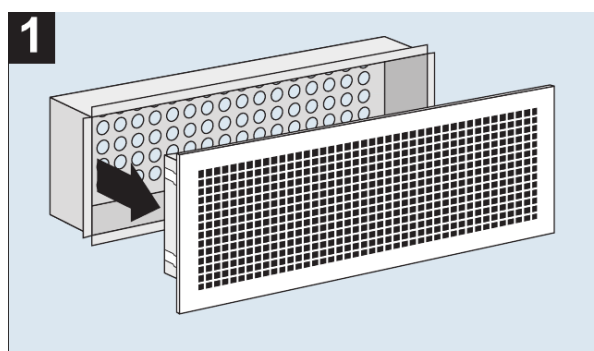

Seřízení – zaslepení 1 trysky: $k = -0,185$

Připojovací skříň PTE neovlivňuje měřicí tlak.